

Aero Design Ltd.**Work Order Control Sheet**Work Order#: 2015-24Date Opened: 25 Feb 2015Title: AssemblyAircraft OEM: BellAircraft Model: 206L/407Product Type: Cargo BasketProduct Model: Standard Quantity: 1**Work Order Contents**

Work Order/Build Sheets (Procedures Provided)
Additional Work Sheets (Standard Practice)
Drawings (See List Below)
Parts Distribution Sheet
Sub Component Tags
Completed Certification (Original)
Time Sheet (R&D)
Notes

Initial or N/A

JR
N/A
JR
JR
JR
JR
N/A
N/A

Build Sheet Contents

Tasks Initialled
Dual Inspections Initialled

Initial or N/A

JR
JR

Drawing List

Drawing #	Rev #	Description	Initial or N/A
69810	3	Basket	JR
69827	2	Data Plate	JR

Traveller

Install walkway on lid
Install lid on basket body
Re-tap mounting lug holes and install mount lugs
Install handle brackets
Install handle
Install lid prop
Install data plate

Initial or N/A

JR
JR
JR
JR
JR
JR
JR

Component Completion

Quantity Complete on This Work Order
Quantity Incomplete on This Work Order
Further Processing Required Before Release
Release to Stock as Components

As Instructed

1
N/A
N/A
N/A

Certification

Form One Completed
Serviceable (Green) Tag Completed
In Process (Yellow) Tag Completed
Unserviceable (Red) Tag Completed
Parts Placed in Stores for Distribution

Initial or N/A

JR
N/A
N/A
N/A
N/A

Additional Documentation

Documentation of a minor change
Non-Conformance Report Required
Service Difficulty Report Required

Initial or N/A

N/A
N/A
N/A

Billing

Local (Aero Design)
Research and Development
Third Party

Initial or N/A

JR
N/A
N/A

Work performed by:

Print: J Rekve for M RekveSign: Jason RekveSCA: AD01Date: 25-Feb-15

ICC / Dual Inspection performed by:

Print: Jason RekveSign: Jason RekveSCA: AD01Date: 25-Feb-15

Work Order closed by:

Print: Jason RekveSign: Jason RekveSCA: AD01Date: 01-Mar-15

Approved Manufacturing Facility 73-04

Form 20.D.03

Rev. Original 23 Sep 2014



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity: 1

PN: 69812-01

Aircraft: Bell/ Eurocopter Model: 206L-407/AS350

Description: Lid

Supplier: Aero Design

Color: White

WO#: 2013-55

PO# N/A



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

Nomenclature: 407 Std basket No. of pieces: 1

Manufacturer: Aero Design Ltd.

Part No.: 69811-01 Serial / Batch No.: NSN

TTSN: NIP TSO: N/A Rem.: N/A

Work Order No.: 2013-46

Remaining Tasks to be Performed: To be assembled
into completed basket

Signature: [Signature]

Date: Nov 12/13 Lic. No. / ACA AB 01

In Process



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

Remarks

In Process

CARGO BASKET ASSEMBLY - COMMON

B206L/407 STD.

General

WO 2015-24

These instructions apply to all cargo basket assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69810, Revision 3 – Standard Low Mounted Basket
94510, Revision 0 – Extra-Wide Low Mounted Basket
94610, Revision 0 – Extra-Wide Low Mounted Ski Basket
76610, Revision 0 – High Mounted Ski Basket

Eurocopter AS350/AS355 – left or right

77610, Revision 1 – Short Basket
76410, Revision 3 – Medium Basket (left or right)
78410, Revision 2 – Long Basket
94010, Revision 0 – Extra Large (ski) Basket

Robinson R44 – left or right

90610, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80210, Revision 0 – Short Basket
80310, Revision 0 – Medium Basket
81110, Revision 0 – Long Basket

Bell 429 – right or left

95911, Revision 0 – Standard Basket

Bell Medium – left or right

75111, Revision 0 – Standard Basket
95511, Revision 0 – Extra Large (ski) Basket

MD600

82811, Revision 0 – Standard Basket

Options

70405, Revision 3? – Lid Walkway

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

Work Order: _____

Date Open: _____

1. Lid Assembly

AAC

- a. Install lid bumpers on bottom.
 - i. Fill bumper holes with RTV silicone sealant.
 - ii. Insert 49205-14 lid bumper, 3 or 4 places per lid.
- b. Install placard on bracket on top of lid.
 - i. Locate placard on bracket.
 - ii. Drill #30 through placard and bracket, using holes in placard.
 - iii. Remove placard and de-burr holes in placard and on bracket.
 - iv. Locate placard on bracket, and cleco in place.
 - v. Rivet placard with four CR3213-4-02 CherryMax rivets.
- c. Option: Install walkway on top of lid (lid must be fitted with walkway provisions)
 - i. Note: avoid touching surface of tread plate with bare hands to prevent smudges or marks on the top surface.
 - ii. Pull tread plate from stock. Shear tread plate to length.
 - iii. De-burr edges of tread plate with scotch-brite disc on die-grinder.
 - iv. Locate tread plate on lid. Hold tread plate in place with bags of lead shot.
 - v. Mark and drill #30 holes:
 1. 0.25" from edge of tread plate, centre on cross members (0.38")
 2. 0.25" from edge of tread plate, middle of each walkway stringer
 - vi. De-burr and counter-bore (if required to provide clearance of rivet head on checker pattern) all holes in tread plate using 1/4" piloted counter bore on both sides.
 - vii. De-burr holes in lid tubes.
 - viii. Apply bead of RTV silicone sealant along all tubes under tread plate.
 - ix. Set tread plate in place, secure with clecos if necessary.
 - x. Rivet placard with CR3213-4-02 CherryMax rivets
- d. Record PO/WO of all parts (including lid) used in steps above on attached material tracking list.

2. Body Assembly

AGC

- a. Install attachment fittings
 - i. Carefully remove excess powder coat from around attachment lug threads using a countersink.
 - ii. Run 3/8-24 tap into attachment lugs to clear threads.
 - iii. Apply anti-seize compound to attachment fittings 96710-01 (alternate: Ancra 40088-14)
 - iv. Install attachment fittings with two NAS1149F0363P washers in four lugs in basket.
 1. 90610 (Robinson R44) basket only:
 - a. Install 1 fitting 906?? in lower forward attachment lug only.
 - b. Install 3 96710-01 fittings in remaining locations.
 - v. Torque to ??

- b. 946 Basket Only: Install Cutout Brace – *must be completed after hinge installation*
 - i. Locate 94621-01 Brace over aft cross tube cutout
 - ii. Install two AN4-6A bolts and two AN4-30A bolts with NAS1149F0463P washers.
 - iii. Torque AN4 bolts to ??
- c. Record PO/WO of all parts (including basket) used in steps above on attached material tracking list.

3. Hinge Installation

AOB

- a. Prepare hinge.
 - i. Cut hinge to length:
 - 1. 776, 906 – 54"
 - 2. 751, 803 – 70"
 - 3. 698, 764, 945 – 72"
 - 4. 784 – 90"
 - 5. 940, 946, 959 – 95"
 - ii. Drill #30 pilot holes using hinge jig. For long hinges, flip at specified location on jig.
- b. Install hinge on basket
 - i. Locate hinge on basket (standard baskets)
 - 1. centre fore/aft
 - 2. 0.15" – 0.18" up from bottom edge
 - ii. Locate hinge on basket (extra wide baskets)
 - 1. centre fore/aft
 - 2. set hinge at 90 degrees (as if lid would be installed) using a small square, locate vertical side at 22.5" from outboard edge.
 - iii. Drill #30 through holes in hinge into basket rim. Cleco in place with 1/8 (copper) clecos.
 - iv. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 (black) clecos.
 - v. Remove hinge and de-burr holes in hinge and basket rim.
 - vi. Cleco hinge to basket with 5/32 clecos.
 - vii. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations
- c. Install lid on basket
 - i. Locate lid on hinge (all baskets)
 - 1. center fore/aft
 - 2. 0.15" – 0.18" down from top edge
 - ii. Drill #30 through holes in hinge into lid rim. Cleco in place with 1/8 clecos.
 - iii. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 clecos.
 - iv. Remove hinge and de-burr holes in hinge and lid rim.
 - v. Cleco lid to hinge with 5/32 clecos.
 - vi. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations

- d. Record PO of hinge and rivets on attached material tracking list.

ADDC

4. Install Handle

a. Install handle brackets.

- i. Set 84267-01 handle bracket on provisions in hoops, 2 places.
- ii. Install AN3-11A bolt, NAS1149F0363P washer (2), MS21044N3 nut. Two places per bracket, two brackets per basket.
- iii. Torque AN3 bolts to ??.

b. Install handle

- i. Trim 36278-01R and 36278-01L springs to ensure end of spring does not extend past edge of handle bracket, approximately 1/8". Set springs over bushing of 84261-01 handle assembly.
- ii. Grease two 36275-01 bushings with ???. Insert into bushings of handle assembly.
- iii. Locate handle on basket lid. Insert AN3-12A bolt with NAS1149F0363P through bracket on lid and handle bushing on one end of handle.
- iv. On other end of handle, hook spring over catch rivet on handle assembly and use spring tool to twist spring to catch arm on bracket on lid while inserting AN3-12A bolt with NAS1149F0363P washer through lid bracket and handle bushing.
- v. At first end, remove bolt and repeat step iv.
- vi. Install NAS1149F0363P washer and MS21044N3 nut on both AN3-12A bolts.
- vii. Torque AN3 bolts to ??.

c. Check handle

- i. Operate handle to ensure handle does not bind and springs hold handle in.
- ii. Snap handle into brackets to ensure handle locks.

- d. Record PO/WO of all parts used in steps above on attached material tracking list.

5. Install lid brace

ADDC

- a. Locate 36280-01 lid brace on bushing in basket. Ensure brace is on forward end of basket as it will be installed on the helicopter.
- b. On lid end, insert AN970-3 washer into end of lid brace. Insert AN3-15A bolt with NAS1149F0363P washer through AN970-3 washer, lid prop, and lid bushing. Install NAS1149F0363P washer and MS21044N3 nut on bolt.
- c. On basket end, insert AN3-17A bolt with AN970-3 washer through lid prop and basket bushing. Install NAS1149F0363P washer and MS2144N3 nut on bolt.
- d. Ensure brace is seated on lip of bushings before tightening nuts.
- e. Torque AN3 bolts to ??
- f. Record PO/WO of all parts used in steps above on attached material tracking list.

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

OK

6. Final Inspection

Dual inspection by a different person than assembled the basket.

- a. Check for general condition and correct assembly:
 - i. Bolts are tight
 - ii. Rivets are installed correctly
 - iii. Handle operates correctly
 - iv. Lid brace operates correctly
- b. Check that PO/WO numbers have been recorded.

Work Order: 2015-24Material Tracking Sheet
Bell 206L / 407
Standard Basket Assembly

1 of 2

Date Opened: 25 FEB 2015

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
			69810-01	Cargo Basket Assembly		
Step 1				<i>Lid Assembly</i>		
	. 1		69812-01	Basket Lid Assembly		2013-55
Step 1.a.	. . 3		49205-14	Bumper	Argus Industries Bumper	
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 1.b.	. . 1		69827-01	Placard	0.063 Sheet, 6061-T6 Aluminum	
	. . 4		CR3213-4-02	Cherry Rivet		14048
Step 1.c.	. 1		70405-01	Lid Step Modification		
(option)	. . 1		70405-04	Tread Plate	3003 Aluminum Tread Plate, 0.063"	14074
	. . A/R		CR3213-4-02	Cherry Rivet		14048
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 2				<i>Basket Assembly</i>		
Step 2.a.	. 1		69811-01	Basket Body Assembly		2013-46
	. . 4		96710-01	Fitting	Alternate: Ancra 40088-14	15006
	. . 8		NAS1149F0663P	Washer		13084
Step 3				<i>Hinge Installation</i>		
	. 1		MS20001P4	Piano Hinge	72"	14091
	. 8		CR3523-5-02	Cherry Rivet		14080
	. A/R		CR3213-5-02	Cherry Rivet		14084
Step 4	. 1	84255	84255-01	<i>Handle Installation</i>		
Step 4.a.	. . 2		84267-01	Bracket	Delrin, 3/4" Sheet	
	. . 4		AN3-11A	Bolt		
	. . 8		NAS1149F0363P	Washer		
	. . 4		MS21044N3	Nut		





Work Order: 2015-24Date Opened: 25 FEB 2015Material Tracking Sheet
Bell 206L / 407
Standard Basket Assembly

2 of 2

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 4.b.	. . 1		84261-01	Handle Assembly		
	. . 2		36278-01	Spring (1 left, 1 right)	304 Stainless, 1/16" Dia Music Wire	
	. . 2		36275-01	Bushing	Brass, 5/16" Dia	
	. . 2		AN3-12A	Bolt		
	. . 4		NAS1149F0363P	Washer		
	. . 2		MS21044N3	Nut		
Step 5				Lid Brace Installation		
	. 1		36280-01	Brace Assembly		
	. 1		AN3-15A	Bolt		
	. 1		AN3-17A	Bolt		
	. 2		AN970-3	Washer		
	. 3		NAS1149F0363P	Washer		
	. 2		MS21044N3	Nut		
Step 6				Inspection	None	

2015-24

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
1	CHANGED LUGS	BUC	08/11/2006
2	PLACARD CHANGED, AFT END MODIFIED FOR CROSS TUBE CLEARANCE	BUC	29/06/2007
3	HINGE RIVETS CHANGED, HANDLE DETAILS CHANGED, PLACARD CHANGED	BUC	14/10/2011

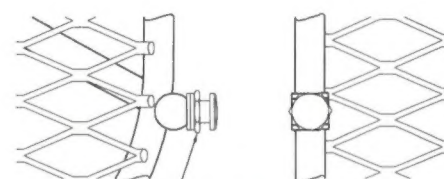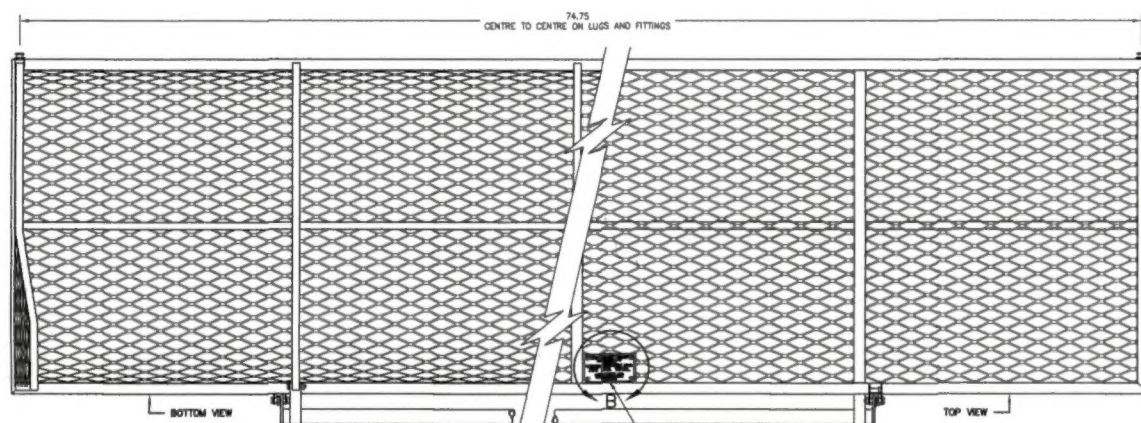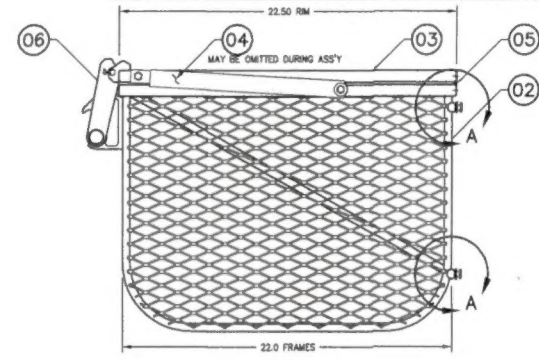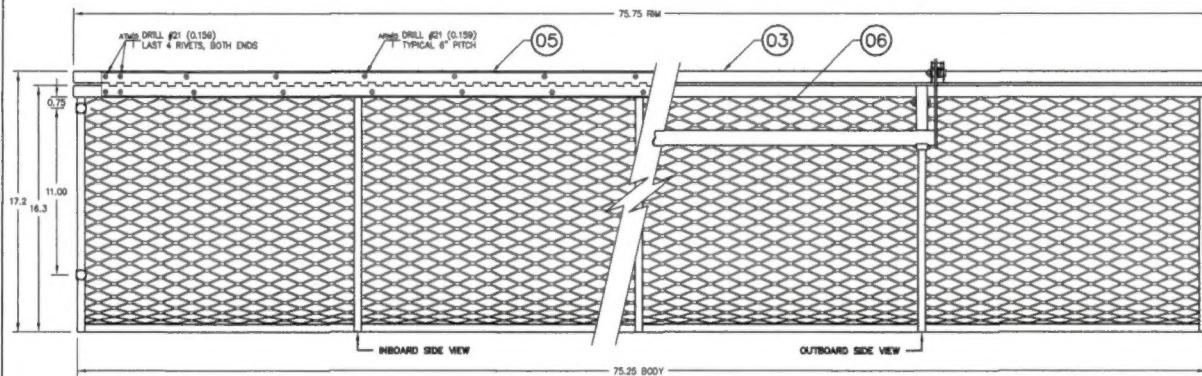


DETAIL A


SCALE 1 : 1
LOOKING AT LOWER ATTACHMENT, UPPER ATTACHMENT SIMILAR
TYPICAL FRONT AND REAR

NOTE:
1. ALL DIMENSIONS SHOWN ARE FOR REFERENCE ONLY. DIMENSIONS OF COMPONENTS
AND COMPLETE ASSEMBLY ARE DETERMINED IN PREVIOUS STEPS.


01 CARGO BASKET ASSEMBLY

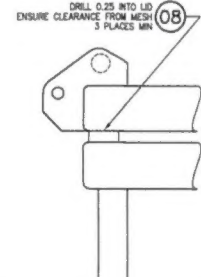

BUMPER INSTALLATION
SCALE 1 : 1

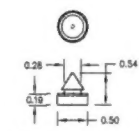

08 BUMPER
SCALE 1 : 1

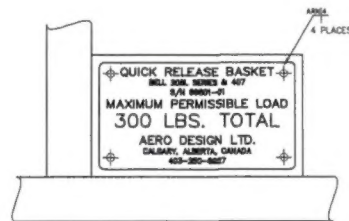

DETAIL B

SCALE 1 : 1
LOOKING AT PLACARD BRACKET

QTY	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
1	AN890-816	WASHER				
4	40088-14	FITTING	ANORA			
4	CR3213-4-02	CHERRY RIVET				
8	CR3213-5-02	CHERRY RIVET				
1	CR3213-5-02	CHERRY RIVET				
3	48205-14	08 BUMPER	ARGUS INDUSTRIES			
1	69827-01	07 PLACARD				
1	84255-01	08 HANDLE BAR INSTALLATION				
1	MS20001P4	05 PLANO HINGE				6 FEET LONG
1	36280-01	04 BRACE ASSEMBLY				
1	69812-01	03 LUG ASSEMBLY				
1	69811-01	02 BASKET BODY ASSEMBLY				
1	69810-01	01 CARGO BASKET ASSEMBLY				

BASIC CODE	DASH NO. FOR DIAMETER	APPROVALS	DATE
REF. NAS 523	N=MFD. HEAD NEAR SIDE F=MFD. HEAD FAR SIDE	DRAWN: JEFF CLARKE	11 APR 2006
C=COUNTERSUNK D=DIMPLE DIGIT# OF SHEETS TO BE DIMPLED	DASH NO. FOR LENGTH	CHECKED: E. BURGOIN	
BASIC CODES: BJ=MS20470AD BS=MS20426AD ARN=CR3213 ATM=CR3213	<div> <div>INSTALL NEW RIVET</div> <div>REMOVE/REPLACE RIVET</div> <div>EXISTING RIVET</div> </div>	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ±0.010 X.XX ±0.03 X.X ±0.1 ANGLES ±1/2°	AERO DESIGN LTD. CONSULTING ENGINEERS, TRANSPORT CANADA APPROVALS, DAR 890M 2015 - 30TH AVENUE N.E., CALGARY, ALBERTA, CANADA, T2E 6R7 TEL: (403) 266-6007 FAX: (403) 266-6008 aerd@atg.ca
		SCALE 1 : 4 SHEET 1 OF 1	TBL SIZE TBL NO. A1 69810 3

2015-24

NOTICE


THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
1	CHANGED TO ENGRAVED ALUMINUM	BJC	19 JUNE 2007
2	INCREASED LOAD	BJC	26 OCT 2011

NOTES

- ENGRAVE 0.007 DEEP AS FOLLOWS:
 "QUICK RELEASE BASKET" - 0.125 HIGH
 "BELL 206L SERIES & 407" - 0.080 HIGH
 "S/N 69801-XX" - 0.080 HIGH
 "MAXIMUM PERMISSIBLE LOAD" - 0.125 HIGH
 "300 LBS. TOTAL" - 0.200 HIGH
 "AERO DESIGN LTD." - 0.125 HIGH
 "CALGARY, ALBERTA, CANADA" - 0.080 HIGH
 "403-250-8027" - 0.080 HIGH

DRILL #30 (0.129)
4 PLACES

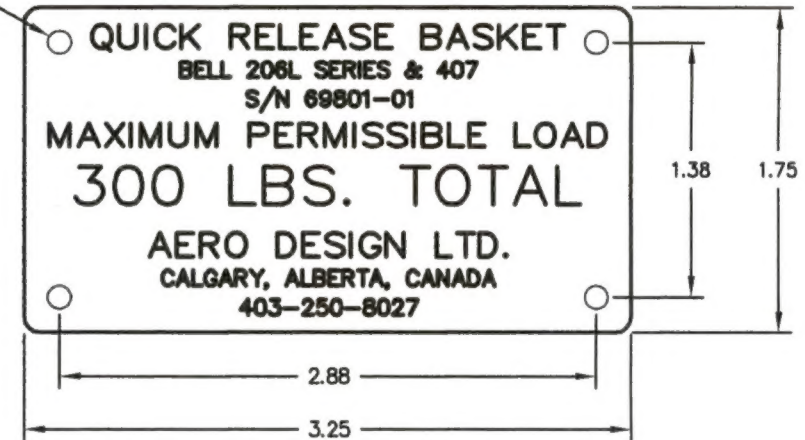

① PLACARD

1	69827-01	01	PLACARD	6061-T6 ALUMINUM	QQ-A-250/11	0.063 SHEET
01	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
QTY	LIST OF MATERIALS					
			APPROVALS	DATE	AERO DESIGN LTD. CONSULTING ENGINEERS, TRANSPORT CANADA APPROVALS, DAR 290M 2013 - 39TH AVENUE N.E., CALGARY, ALBERTA, CANADA, T2E 6R7 tel: (403) 250-8027 fax: (403) 250-8333 aerodesign@telusplanet.net	
			DRAWN: JEFF CLARKE	24 APR 2006		
			CHECKED: E. BURGAIN			
			UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2" X.XX ±0.03 X.X ±0.1		BELL 206L SERIES AND 407 QUICK RELEASE CARGO BASKET PLACARD	
			SCALE 1 : 1		DWG. SIZE	DWG. NO.
			SHEET 1 OF 1		A4	69827
						2


Aero Design

Parts Distribution Sheet

Description: Basket Assembly Kit

WO#

[illegible]

1. Approving Civil Aviation Authority/Country Transport Canada		2. AUTHORIZED RELEASE CERTIFICATE FORM ONE			3. Form Tracking No.	
4. Organization Name and Address AERO Design Ltd. – 9888A Malaspina Road, Powell River, BC, V8A 0G3					5. Work Order/Contract/Invoice WO 2015-24	
6. Item	7. Description	8. Part Number	9. Qty.	10. Serial/Batch No.	11. Status/Work	
	Cargo Basket	69810-01	1	69801-74	New	
12. Remarks Modified with Lid Step and Front End Cutout IAW DCL704						
13a. Certifies that the items identified above were manufactured in conformity to:			14a. <input type="checkbox"/> CAR 571.10 Maintenance Release <input type="checkbox"/> Other regulation specified in block 12			
<input checked="" type="checkbox"/> Approved design data and are in condition for safe operation. <input type="checkbox"/> Non approved design data specified in block 12.			Certifies that unless otherwise specified in block 12, the work identified in block 11 and described in block 12, has been performed in compliance with the Canadian Aviation Regulations.			
13b. Signature		13c. Approved Organization Number		14b. Signature		14c. Approved Organization Number
 Jeff Clarke – AD02		AMF 73-04				
13d. Name		13e. Date (dd/mmm/yyyy)		14d. Name		14e. Date (dd/mmm/yyyy)
Jeff Clarke – AD02		25 Feb 2015				
<p style="text-align: center;">Installer Responsibilities</p> <p>This certificate does not constitute authority to install.</p> <p>Installers working in accordance with the national regulations of a country other than that specified in block 1 must ensure that their regulations recognize certifications from the country specified.</p> <p>Statements in blocks 13a or 14a do not constitute installation certification. In all cases, the technical record for the aircraft must contain an installation certification issued in accordance with the applicable national regulations before the aircraft may be flown.</p>						

UP HELICOPTERS